

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型

TOYOTA C-HR 2017-present


PART NO. 8880

Contents 內含配件

※ Use hand tools only for installation

※ 安裝過程請使用手動工具

1. 28mm Front Sway Bar 28mm前防傾桿 1PCS
2. Sway Bar Bushing 防傾桿固定橡皮 2PCS
3. Bushing Bracket 防傾桿固定座 2PCS
4. Bolt (M10x1.25x25) 固定座專用螺絲 4PCS

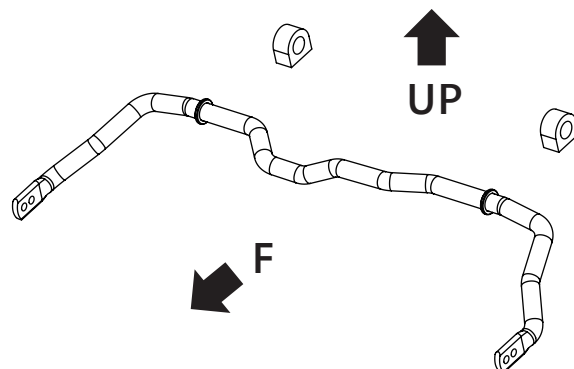

Installation tips 安裝提示

※ The bushings feature self-lubricated design. No greasing needed

※ 防傾桿專用橡皮，已有加入自潤功能，無須添加潤滑劑



1. Drop front subframe for easier access to replace the sway bar.

安裝前防傾桿建議將前大樑拆卸，以便更換防傾桿



2. LH: Factory brackets and bolts

RH: Supplied brackets and bolts

Please install the sway bar using supplied brackets and bolts.

左側為原廠固定座及螺絲

右側為專用型固定座及螺絲

安裝請使用專用配件



3. Recommended Torque Spec

螺絲扭力參考值：

M8-60Nm

M10-80Nm

M12-100Nm

M14-160Nm

Thread locking glue is recommended for the bolts.

建議使用螺絲防鬆膠

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

