

# Installation Instructions

## 安裝說明書

FRONT SWAY BAR

前防傾桿, 32mm


#Q0614

### Application 適用車型

TESLA MODEL 3 '17-


### Components 內含配件

- ① Sway bar 防傾桿桿身.....1pcs
- ② Bushing 橡皮.....2pcs
- ③ Bushing clamp-RH 橡皮固定環-右.....1pcs
- ④ Bushing clamp-LH 橡皮固定環-左.....1pcs

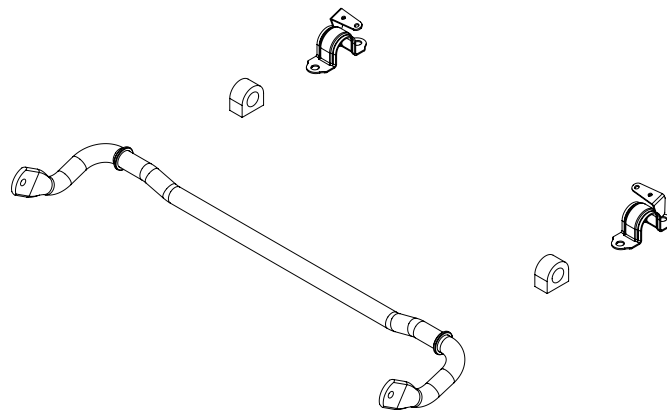

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

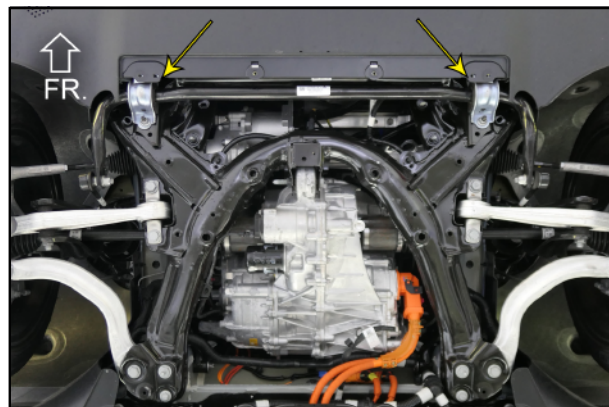

### Instructions 安裝說明

1. Raise and safely support the vehicle.  
將車輛升起。
2. Remove the front undertray panel to access front sway bar.  
卸下前底盤下護板後即可找到前防傾桿。
3. Remove sway bar end links.  
將防傾桿連接桿(李仔串)拆下。
4. Remove the OE sway bar and bushing clamps.  
將原廠防傾桿及固定環拆下。
5. Install supplied bushings and bushing clamps onto the new sway bar.  
使用附件橡皮及固定環安裝至新的防傾桿桿身。
6. Install the new sway bar to the vehicle.  
將新的防傾桿安裝至車輛。
7. Reinstall the sway bar end links.  
將防傾桿連接桿(李仔串)裝上防傾桿。
8. Reinstall the front undertray panel.  
將前底盤下護板裝回車輛。



Illustration of installed state 安裝完成示意圖